

6 Meals Timed Automatic Pet Feeder

AF 108

Please read this guide before programming the feeder





Thank you for choosing Qpets. Our mission is to make you a happy pet owner by providing quality pet products, including the latest tools and technique to successfully train your pets. If you have any questions or comments, please contact our Customer Support Center at 1-909-923-8743 or visit our website at www.qpets.com.


Table of Contents

2
2
2
3
3
4
4
5
5
6
6
6
7
7
7
7
8
8
8
9
.10
10



Qpets 6 Meals Timed Automatic Pet Feeder can be set to feed your pet up to six different times in one day. Feeding time(s) and amount of food are adjustable. You can also record a 6 seconds personal voice message that will play at each scheduled feeding. Control panel clock/timer can display a 12 or 24 hr format.

4 C-size batteries are required (a red LED indicator will light up when batteries are low.).

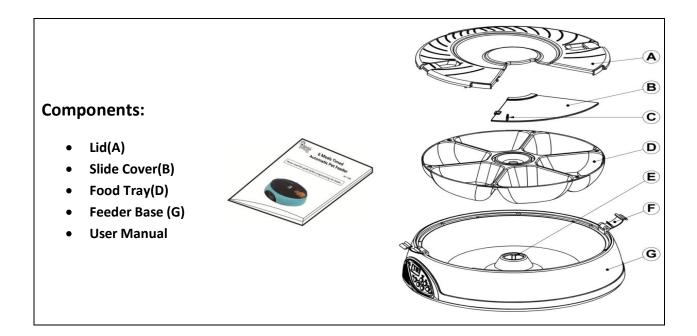

Quick Start Guide

Function of Control Panel Keys

- ON/OFF SWITCH Turn the feeder on/off. Turn off only when not using for long periods as this will RESET clock and feeding schedule
- **SET**—Set current time
- MODE—Switch between preset feeding times and current time
- START NOW—Start the feeding timer immediately
- **START TOM**—Start the feeding timer next day
- REC—Records your personal voice message
- PLAY—Play back your recorded voice message




Getting started

- 1. Open the battery cover (located at the bottom of feeder).
- 2. Install four C size batteries.
- 3. Close the battery cover and turn on the switch. (Located next to the battery cover).
- 4. The feeder will cycle once until "12:00" is **showing** on the LCD display.
- 5. The feeder makes the food available in sequence: Tray 1; Tray 2; Tray 3; Tray 4; Tray 5; Tray 6.
- 6. Follow the **steps 1- 4** to set up the feeding schedule and fill the food into **FOOD TRAYS.**


Step 1-Set the current time

- 1. After the feeder cycle once the "12:01" will show on the LCD display.
- 2. Press and hold **SET** key for 2 seconds to enter the **EDIT MODE** (**PM** on the bottom of left corner represents **PM** if display in 12hr format). The hour number will be blinking now.
- 3. Press the **MODE** key to set the hour. (Press and hold the **MODE** key, the Hour Number will rapidly increase until you release the key).
- 4. Press the **SET** key to confirm hour. The minute number will blink now.
- 5. Press the **MODE** key to set the minutes. (Press and hold the **MODE** key, the Minutes Number will rapidly increase until you release the key).
- 6. Press the **SET** key again to confirm minutes. Both the clock on the LCD display will be blinking now.
- 7. If you DO need to change the 12hr/24hr format, press and hold the MODE key for 2 seconds to switch 12hr/24hr display. After you release the MODE key, the hour and minutes will stop blinking and switch to 12hr/24hr display. If you DO NOT need to change the 12hr/24hr format Press SET key to confirm the 12hr/24hr format

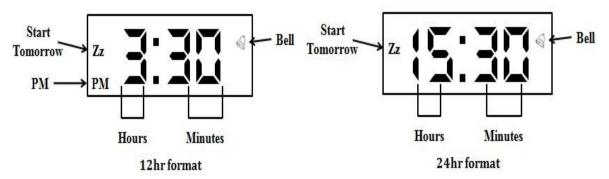



Step 2-Set the feeding time

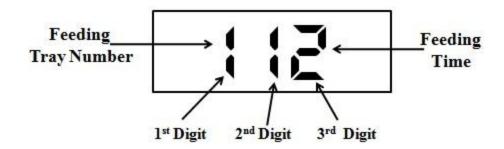



- 1. Press **MODE** key. () will show on the LCD display. This is the feeding time display mode.
- 2. Press and hold **SET** key for 2 seconds to enter the **EDIT MODE**. The 2nd digit & 3rd digit will be blinking now. (The 1st Digit shows the feeding numbers and the number of trays; 2nd Digit and 3rd Digit show the feeding hours)
- 3. Press the **MODE** key to set the feeding time. (1= feed at 1:00; 2= feed at 2:00; 3= feed at 3:00; and so on. If you use 12hr display, The **PM** will shows on the bottom of left corner)
- 4. Press the **SET** key to set the feeding tray number. (1= 1st feeding/tray; 2= 2nd feeding/tray; 3= 3rd feeding/tray; 4th feeding/tray; 5th feeding/tray; 6 = 6th feeding/tray)
- 5. Press the **SET** key to confirm your feeding numbers and feeding time which you set.
- 6. The feeding will start from the first feeding number & time.

Program Examples:

1. If you would like to feed your pet once a day at 13:00(1:00PM) and feed for 6 days.

 The 1st Digit (Feeding Number) 1, 2, 3, 4, 5 &6 should set all the same Feeding Time 13 (1PM).

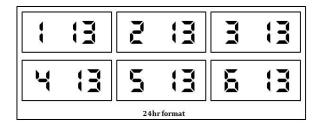







2. If you would like to feed your pet twice a day at 10:00 & 18:00 for three days.

 
The 1st Digit (Feeding Number) 1, 3 & 5 should set all the same Feeding Time 10; The 1st Digit (Feeding Number) 2, 4 & 6 should set all the same Feeding Time 18 (6PM).

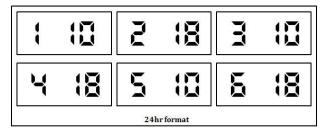




3. If you would like to feed your pet 3 times a day at 6:00(6:00am), 12:00 (12:00pm) & 18:00 (6:00pm) for 2 days.

The **1**st **Digit** (**Feeding Number**) 1 &4 should set all the same **Feeding Time** 6; The **1**st **Digit** (**Feeding Number**) 2 & 5 should set all the same **Feeding Time** 12 (12PM); The **1**st **Digit** (**Feeding Number**) 3 & 6 should set all the **same Feeding Time** 18 (6PM).

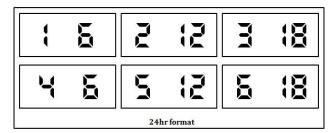

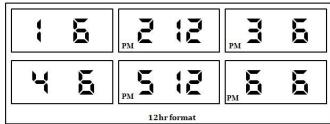

Step 3- Start the feeding timer

- Press the START NOW key to start the feeding timer now. (The feeder will cycle once and start the timer immediately and only the BELL icon will show on the upper of left corner)
- 2. Press the **START TOW** key to start the feeding timer next day. (The feeder will cycle once and the **Zz** icon will show on the upper of left corner, the **BELL** icon will show on the upper of right corner)


Step 4- Fill the food into the tray

1. Open the LOCK (F) and take LID (A) and SLIDE COVER (B) out.



- Fill your pet food into the FEEDER TRAY (D) (Tray 1 to Tray 6). Each FEEDER TRAY can fill up to 1 cup pet food, DO NOT OVER FILL the pet food for each FEEDER TRAY as it will jam the feeder or damage it.
- 3. Put the SLIDE COVER (B) back.
- 4. Put the LID (A) back onto the feeder.
- 5. Put the LOCK (F) on.
- 6. Make Sure the **SLIDE COVER** (**B**) locks into the position with the **LID** (**A**).

NOTE: If you only want one feeding, you should only fill tray 1, if you want two feedings, you should fill tray 1 & tray 2; if you want three feedings, and you should fill tray 1, tray 2 & tray 3, and so on...

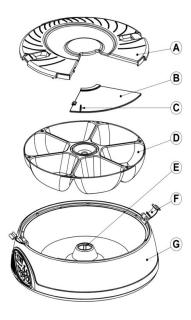


General Operation

How to review the settings

Press the **MODE** key to cycle through and view the feeding times which you set. (1^{st} Feeding time $\rightarrow 2^{nd}$ Feeding time $\rightarrow 3^{rd}$ Feeding time $\rightarrow 4^{th}$ Feeding time $\rightarrow 5^{th}$ Feeding time $\rightarrow 6^{th}$ Feeding time $\rightarrow Clock$)

 How to change a scheduled feeding time



- If the feeding timer has begun already, press and hold START NOW key to reset the FOOD TRAY. The FOOD TRAY will rotate back to the 1st Tray. (If you want start from the current FOOD TRAY, please directly start from the 2 to reschedule the feeding time)
- 2. Press **MODE** key to enter the **FEEDING TIME DISPALY MODE**. The **Current Feeding Time** will show on the LCD display.
- 3. Press and hold **SET** key for 2 seconds to set the feeding time. The 2nd digit & 3rd digit will be blinking now.
- 4. Press the **MODE** key to set the feeding time.
- 5. Press the **SET** key to set the feeding number.



6. Press the **SET** key to confirm your feeding numbers and feeding time which you set. The Feeder will cycle once that means the feeder will start the new schedule immediately.

How to change a Current Clock Time

- 1. Press the **SET** key and hold for 2 seconds to enter the **CLOCK SET MODE**. The hour number will be blinking now.
- 2. Press the **MODE** key to set the hour.
- 3. Press the **SET** key to confirm hour. The minute number will be blinking now.
- 4. Press the **MODE** key to set the minutes.
- 5. Press the **SET** key to confirm minutes. Both the hour and minutes number will be blinking now.
- 6. Press **SET** key to confirm the 12hr/24hr format if you do need to change the 12hr/24hr format. If need, press and hold the **MODE** key for 2 seconds to switch 12hr/24hr display. After you release the **MODE** key, the hour and minutes will stop blinking and switch to 12hr/24hr display.

How to record voice message to be played at the feeding times

- 1. Press and hold the **REC** key, the Red LED light will turn on.
- 2. Speak to the feeder for your message. You have up to 6 seconds.
- 3. When finished, release the **REC** key.
- 4. Press the **PLAY** key to listen the message you just record. Repeat 1-3 if you want to record it again.

Note: Your message will be played 3 times at each feeding time

When need to replace the batteries

Change all the batteries when the **RED LCD Indicated light FLASHES**. Please use new alkaline batteries.

Assemble and Disassembly

A: LID – LID pins with the FEEDER BASE and push down. The LID pins only align one way
on the FEEDER BASE; do not use excessive force when installing the LID. Check for
proper alignment if you have trouble getting the LID to lock down on the FEEDER BASE



- B: SLIDE COVER Place the SLIDE COVER on top of the FOOD BOWL so the finger tab is in the opening of the LID
- C: FINGER TAB For closing the SLIDE
 COVER which will lock into the LID
- D: Food TRAY The FOOD TRAY will seat into the HUB in the FEEDER BASE in only one position. Be sure the FOOD TRAY seats properly onto the HUB
- E:HUB The FOOD TRAY slides into this and is what rotates the FOOD TRAY
- F: LOCK is used to lock the lid to the
 FEEDER BASE. Push down in the middle of each LOCK and pull up using your fingertips.
- G:FEEDER BASE Place the FEEDER BASE on a flat level surface at a height that is easy for you to see what you are doing




- 1. Push in the middle of each **LOCK** and pull up using your fingertips.
- Remove the LID. (DO NOT pull the LID off from only one side as it can damage the lock pins)
- 3. Take the SLIDE COVER out
- 4. Take the FOOD TRAY out

Disassembly

- 1. Put the **FOOD TRAY** back
- 2. Put the **SLIDE COVER** back
- 3. Put the **LID** back
- 4. Put the LOCK on

Cleaning and Care

- When the food tray starts getting dirty, you can DISASSEMBLE the LID, SLIDE COVER and FOOD TRAY from the FEEDER BASE.
- Clean the LID, SLIDE COVER and FOOD TRAY in warm soapy water.
- Do not wash the LID, SLIDE COVER and FOOD TRAY in dishwasher, as parts may become permanently damaged!
- USE a soft damp cloth to clean the FEEDER BASE. (DO NOT wash FEEDER BASE with RUNNING WATER)

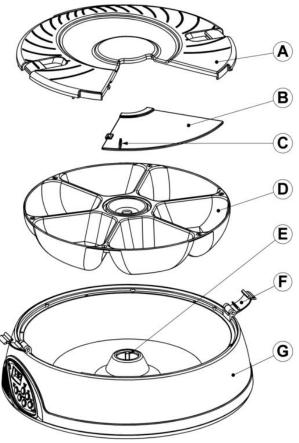



Important Tips: (Please Read)

- 1. The clock can display in either 12 or 24 hour display format. In 12hr mode PM is represented by (PM) on the bottom of left corner.
- 2. There is no setting allowed to set when the **FOOD TRAY** is rotating.
- 3. Under Clock Display Mode the colon icon (:) will flash.
- Under the Feeding Timer Display Mode, there are 3 digits will show up. 1st Digit (1, 2, 3, 4, 5 &6) is feeding number and also shows the number of Food Trays. 2nd Digit & 3rd Digit indicate the feeding time in hours.
- 5. The **BELL** icon () will show on the upper of right corner of LCD display while the feeding timer starts.
- 6. Under **Feeding Timer Display Mode**, a solid **BELL** icon () means the feeding time has already passed; a flashing **BELL** icon means the feeding time has not been reached yet.
- 7. If the time for the next feeding is set earlier than the present feeding time, the feeding will start the next day.
- 8. Under the **Current Time Setting Mode**, Press and hold **MODE** key for 2 seconds, the **Hour Number** and **Minutes Number** will rapidly increase until you release the key. When the number reaches its maximum, the number will back to the minimum and start increasing again.
- 9. If the feeding timer has begun already, press and hold the **START NOW** key, the **FOOD TRAY** will rotate back to the 1^{st} Tray and the timer will begin from the 1^{st} feeding time again.
- 10. If **START TOM** key is pressed. Both the **BELL** () and **Zz** (**Zz**) icon will show on the LCD display. The **Zz** (**Zz**) icon will turn **OFF** at 0:00 (midnight) to indicate the timer has started.
- 11. **START TOM** (Start Tomorrow) should use by you only want to set the feeder today and start the feeding time next day (tomorrow).
- 12. When **RED** (**LOW BATT**) **Indicated Light FLASHES**, the batteries are low and must be replaced. Change all the batteries as soon as possible. You need to reprogram all your settings after you replace the batteries.
- 13. Training tips: some pet may require a special adjustment period to acclimate to their new automatic feeder. If your pet need a special adjustment period, follow these steps:
 - Place the 6 meals timed automatic feeder next to your pet's existing bowl or feeder.
 - Place food in the food tray of 6 meals timed automatic feeder (allow for a period of time to adjustment)
 - Keep food in the pet's current food bowl. (allow for a period of time to adjustment)



 Once you observed your pet eating from the 6 meals timed automatic feeder. Remove the old bowl or feeder and begin to use 6 meals timed automatic feeder.

Limited Manufacturer Warranty

Manufacturer warranted for 6 months from the date of purchase. Warranty is against the defects in material and workmanship. Solely for the benefit of the original purchaser Keep your dated sales receipt as proof of purchase.

Warranty Cover

Replacement of defective parts and labor

Warranty does not cover

- Damages caused by abuse or failure to perform normal maintenance
- Any other expense.
- This warranty shall not apply to any defect malfunction or failure to conform to the warranty provisions if caused by damage (not resulting from defect or malfunction) due to unreasonable use by the purchaser.

How to apply for the warranty

- Email or call customer support center to get your RMA Number for processing your warranty
- Provide your proof of purchase
- Return the defective product or parts back to our RMA Department

Customer Support Center

Tel: 1-909-923-8743

Monday – Friday 8:30AM – 5:00 PM Pacific Time

Email:qpets@qpets.com
Add: LAVA Electronics Inc.
2580 E Philadelphia ST #D
Ontario, CA 91761, USA



LAVA Electronics Inc 2580 E Philadelphia St #D Ontario, CA 91761, USA 1-909-923-8743

www.qpets.com

Email:qpets@qpets.com
Copyright © LAVA Electronics Inc. 2011. All rights reserved.